




malfunctioning State: No load, Output Voltage > DC 100V

Repairing step: **First must cut off the power, it's very very important!!!**

1) Take out this screw and take off the black panel, take out the screws on the shell and take off the shell

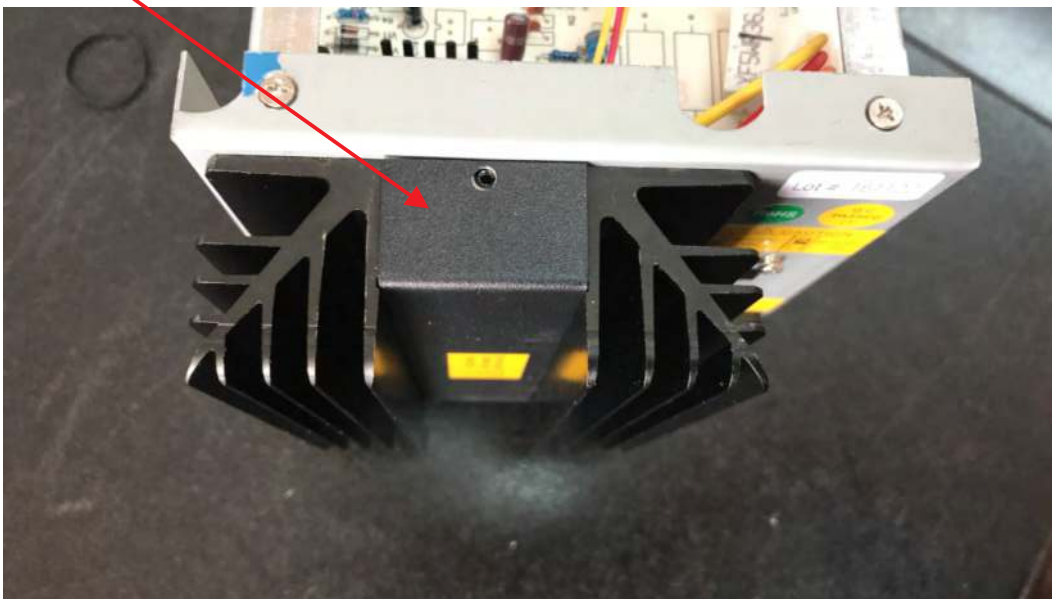

Take care the screws during you take out them

2) Take out these two screws, and take off the black cooling fin



Take out these two screws

The reason is this power transistor was broken

3) Solder off these two feet and take off the broken power transistor and replace it with the new good one which I have sent to you.

When you take off the broken power transistor, you must remember these two feet where they were, because these two feet have directional, if you connect them wrong, the power will be broken. So this is very important.

